




User manual

DELOCK®
we move the world

USB 2.0 PCI Card, 2+1 Port

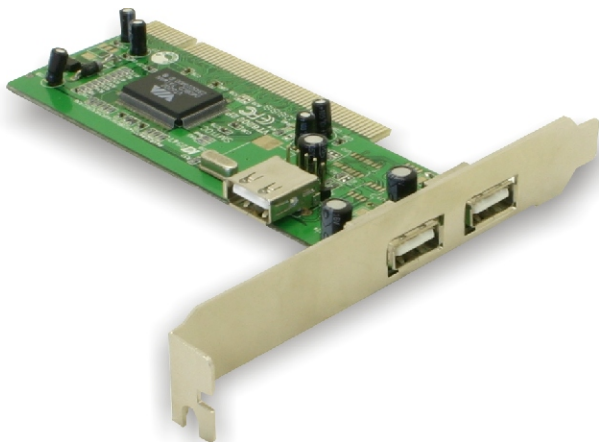

Product-No: 89040

User manual No: 89040-a

www.delock.de



Description

The Delock USB 2.0 PCI card expands your PC by two external and one internal USB 2.0 ports. You can connect USB 2.0 devices like digital camera, printer, scanner, keyboard, mouse, speakers, modem, MP3 player, card reader, etc. to the card.

Specifications

- USB 2.0 specification revision 2.0
- PCI specification version 2.2
- Supports OHCI specification V 1.0
- Data transfer rate up to 480 Mbps
- 2 x USB 2.0 external, 1 x USB 2.0 internal
- Hot Plug, Plug & Play

Note:

USB 1.1 devices are limited to the data transfer rate of USB 1.1, even when they connected to USB 2.0.

System requirements

- PC with one free PCI Slot
- Win 98/98SE/ME/2000/XP (no driver required)

Package contents*

- Delock USB 2.0 PCI card
- User manual

*Make sure that product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.



Hardware Installation

Note:

Follow the general instructions for installation of the card. If necessary, read the manual of your computer, or ask a specialist for help.

1. Turn off your PC, and unplug the power cord.
2. Open the housing.
3. Remove the slot holder from the available PCI slot.
4. Insert the card straight and carefully into the free PCI slot, until it is well seated.
5. Use a screw to attach the card to the housing.
6. Reattach the housing, and connect the power cord the AC adapter.

Driver Installation

Windows XP

1. Start Windows after you install the card. The Hardware Wizard will announce that **"New Hardware was found"**. The driver is found and installed automatically.

Windows 98/98SE/ME/2000

1. Start Windows after you install the card. The Hardware Wizard will announce the **"New Hardware was found"**. The driver is found and installed automatically.

2. Click on **"Next"**.

3. Highlight the line **"Install the software automatically (Recommended)"** in the new window, and click on **"Next"**.

4. Insert the driver CD into the drive, and select the option to **"Browse"** the CD drive. Locate the folders **"VIA"** and **"VT62X2"** on the CD. The driver is selected. Confirm the choice by clicking on **"Next"**.

5. After installation of the driver click on **"Next"** and **"Finish"**, to bring the installation to an end.



Note

Also, you may install the driver by using following method, when, for example, Windows XP did not find the driver automatically. To do so, insert the CD in its drive, and open the folders "**VIA**" and "**VT62X2**". Execute the "**Setup.exe**" file. The driver will be installed.

Support Delock

If you have further questions, please contact our customer support support@delock.de / www.delock.de or phone 0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon. – Fri.: 9:00 – 17:30 pm charge 0.12 €/min*

* A connection fee applies according to fee schedule of Deutsche Telekom AG or your local telephone provider.

You can find current product information on our homepage:

www.delock.de

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user's manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.