



User manual

**DELOCK**<sup>®</sup>  
we move the world

## USB 2.0 CardReader 34 in 1



Product-No: 91629

User manual No: 91629-a

[www.delock.com](http://www.delock.com)



---

## Description

The DeLock CardReader enables you to read these different memory cards via the USB port of your notebook or PC. You can read and write 34 different memory cards.

## Specification

- USB 2.0 specification revision 2.0
- Data transfer rate up to 480 Mbps
- Hot Swap, Plug & Play
- For Windows 98/98SE/ME/2000/XP,  
Mac OS 8.6x or later, Linux OS 2.4.x or later

- Supports following memory cards:

Compact Flash I/II, IBM Micro Drive, Magic Gate, Smart Media, Smart Media ROM, xD, xD M-Type, xD H-Type, Secure Digital, mini SD, SD ROM, T-Flash, Micro SD, Multi Media Card-I, Multi Media Card-II, MMC 4.0, MMC Dual Voltage, MMC Plus, MMC Mobile, MMC Micro, RSHS-MMC, RS-MMC, RS-MMC Dual Voltage, RS-MMC 4.0, Memory Stick, MS Select, MS ROM, MS Pro, MS Magic Gate, MS-Pro Magic Gate, MS-Duo, MS-Duo Magic Gate, MS-Pro Duo, etc.

## System requirements

- PC or Notebook with a free USB Port
- Windows 98/98SE/ME/2000/XP,  
Mac OS 8.6x or later, Linux OS 2.4.x or later

## Package content\*

- USB 2.0 CardReader 34 in 1
- USB 2.0 cable
- Driver CD
- User manual

\*Make sure that the product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.

## Note:

Follow the general instructions for installation of the CardReader. If necessary, read the manual of your computer, or ask a specialist for help.



---

## **Driver Installation**

### **Windows 2000/XP Service Pack 1 and 2**

1. Switch on your computer.
2. Plug the USB cable into the CardReader and the USB A type to a free USB port.
3. The CardReader will be recognized and you can start using the device immediately.

The included CD contains an additional feature for your card reader. To display the removable disks as icons, install the software as follows:

1. Insert the driver CD in the CD ROM drive.
2. Open Windows Explorer, select: CD-drive\ Driver\Windows Driver\Setup.exe
3. Click "ok".
4. Choose "Yes, restart computer" and click "Finish".
5. After restart, the Software is installed.

### **Windows 98/98SE/ME**

1. Switch on your computer.
2. Please do not connect the CardReader yet.
3. Insert the driver CD in the CD ROM drive.
4. Open Windows Explorer, select: CD-Laufwerk\Driver\Windows Driver\Setup.exe
5. As soon as the message appears "connect the CardReader", plug the USB cable into the CardReader and the USB A type to a free USB port. After that click on "ok".
6. Choose "Yes, restart computer" and click "Finish".
7. After restart you can start using the device immediately.



---

### **Support Delock**

If you have further questions, please contact our customer support  
support@delock.de / www.delock.com or phone  
0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon – Fri: 9:00 – 17:30 pm charge 0,12 € / min\*

\* A connection fee applies according to fee schedule of Deutsche Telekom AG or your local telephone provider.

All callers outside of Germany please dial 00493081789324

You can find current product information on our homepage: [www.delock.com](http://www.delock.com)

### **Final clause**

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

### **Copyright**

No part of this user's manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.